


Universal Fitting instructions for 1 ¼ and ½ Flush Grated Wastes

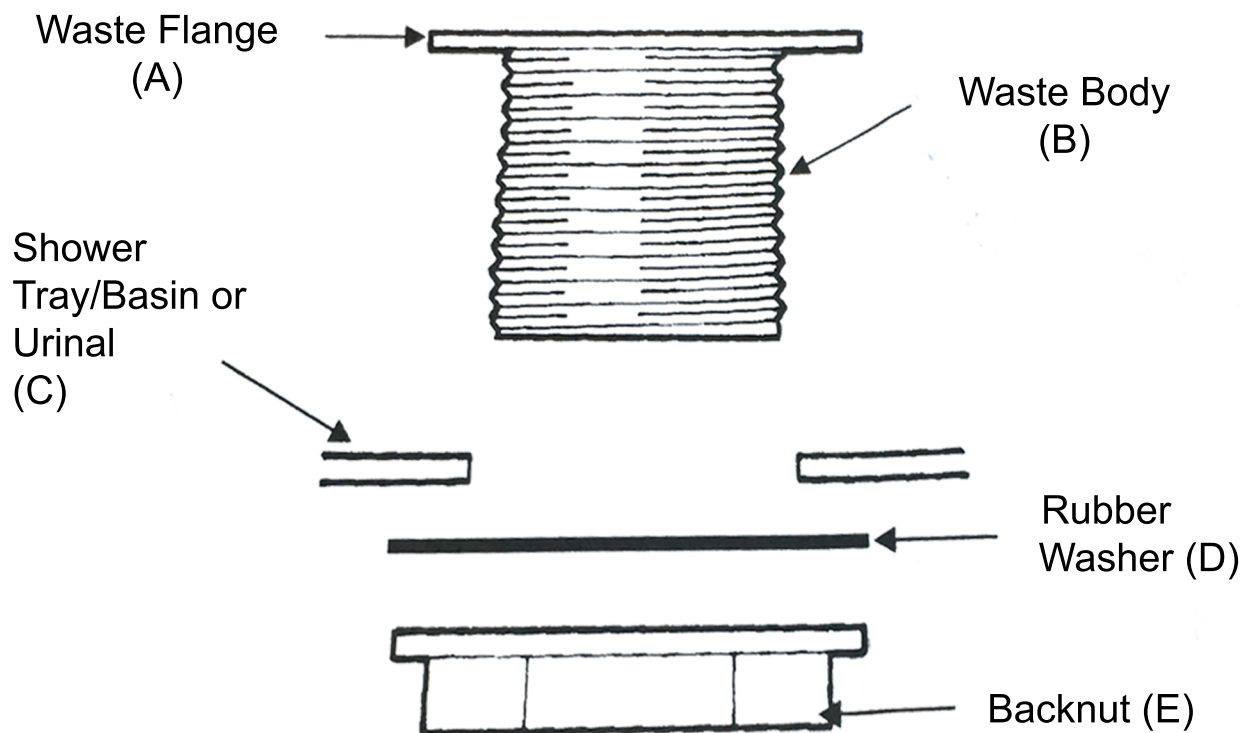

Assemble as per the above illustration.

It will be necessary to apply sanitary grade silicone sealant to the underside of the waste flange (A) and around the topside of backnut (E) to ensure a watertight installation.

Please consult a plumbing professional if necessary.

Aftercare- clean with warm soapy water only. Do not use scourers, abrasives or chemical cleaners.