


Fitting Instructions for Bath Combined Waste & Overflow

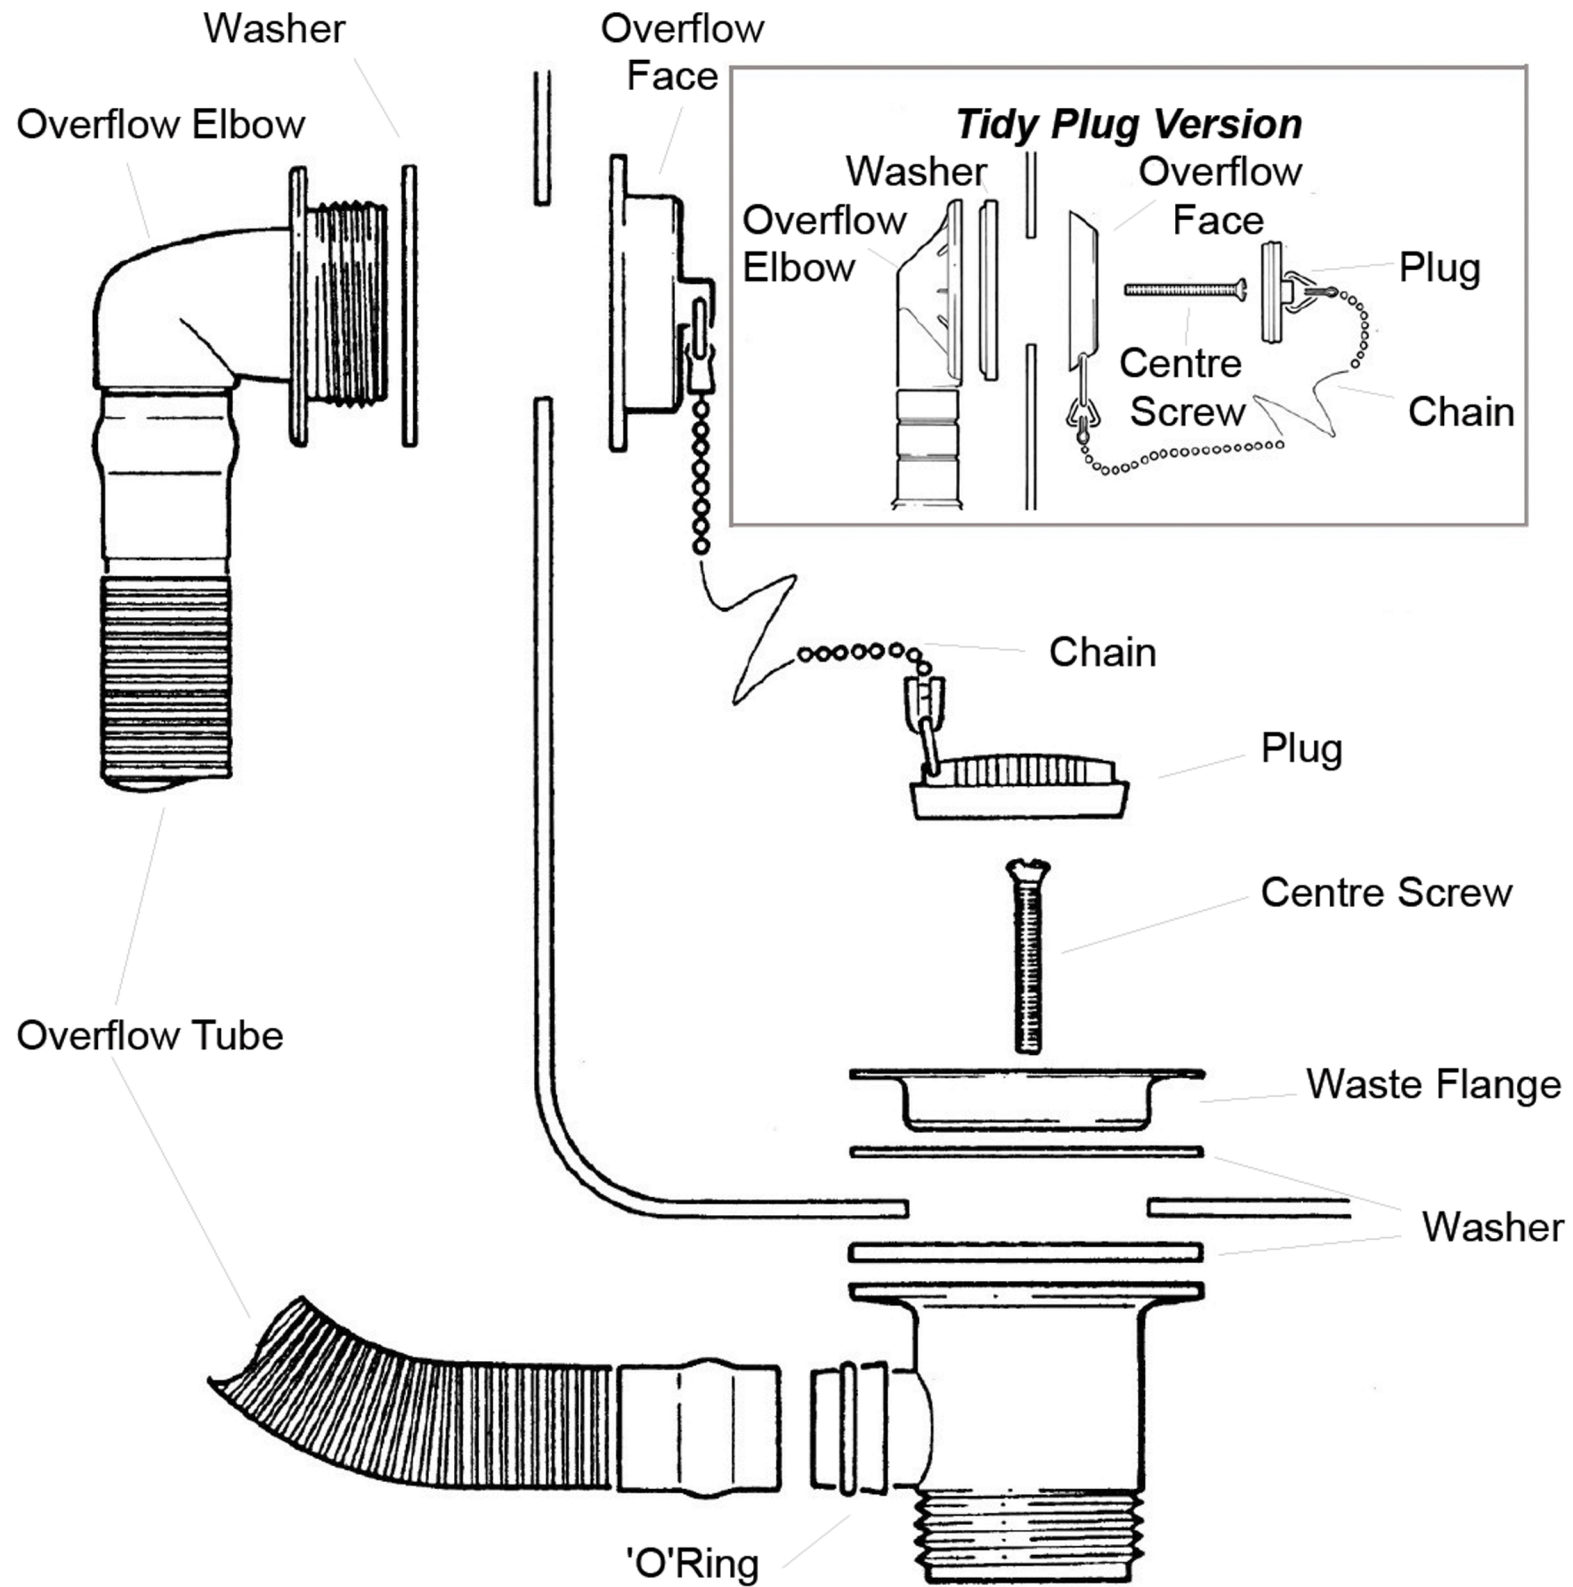

1. Assemble components as shown on drawing.
2. A light application of silicon sealant is recommended on the underside of the waste flange.
3. Care should be taken not to over tighten the centre screw.
4. Once fitting has been completed, carefully clean all surfaces. The finished surfaces on this product are hard and durable and should be cleaned on a regular basis to maintain their appearance. They should only be cleaned with warm soapy water and then wiped with a dry cloth. Under no circumstances should any aggressive or abrasive agent be used, as this can lead to deterioration of the high quality finish.